




Operation Manual

01 Parts Of Device

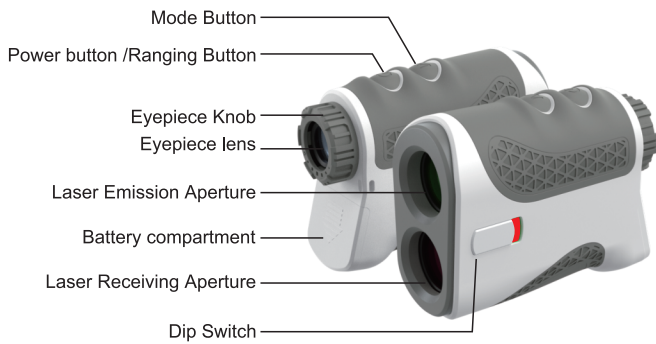

— 1 —

02 Product Parameters


Range	10~1000(m)
Angle Measuring Accuracy	±1°
Angle Measuring Range	-60°~60°
Laser type	905nm (Class 1 laser)
Magnification type	6X
Exit Pupil Diameter	4mm
Object Lens Size	24mm
Field Angle	7°
Battery	CR2,3V / 800mAh (built-in)
Weight	150g
Dimensions	103mm*81.4mm*45.5mm
Operating Temperature	-10°C~50°C

List of Accessory:

Laser Rangefinder(1pc)	Carry Bag(1pc)	Box(1pc)
Operation Manual(1pc)	CR2,3V (1pc)	Lens Cloth(1pc)


03 Screen Display

- 1) Electricity icon
- 2) Angle unit icon
- 3) Target icon
- 4) Meter
- 5) Yard
- 6) Measured value
- 7) Flag pole icon
- 8) Measurement mode code icon
- 9) Measurement symbol icon
Angle icon

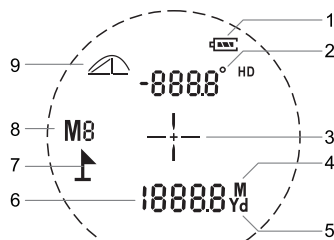

— 2 —


04 Basic Operations

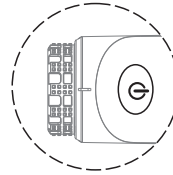

Power ON / OFF


Power ON:
Short press the Power button (⏻) to turn on.

Power OFF:
The machine will shut down automatically after 8 seconds if no any operations.

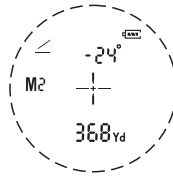

Unit Switch $Yd \Leftrightarrow M$


Press and hold the MODE button for 2 seconds to switch the units in turn, and release the MODE button to keep the switched unit;

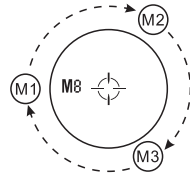

Mode Switch

Short press the MODE button to switch between modes. All modes are displayed on the screen in a loop, and the mode is selected when you release the MODE button.

05 General operation

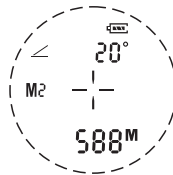

Single Measurement:

Short press the ⏻ button to start the single measurement.


- Take M2 mode as an example

— 3 —



Continuous Measurement:

Press the ⏻ button and keep over 2 seconds, the measured distance value displayed alternately on the screen, and the target sign “+” will be showed on the screen until release the ⏻ button.

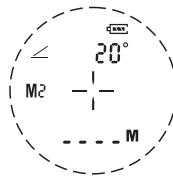

Failure Measurement :

If the measure fails, the data on the screen will be displayed as: “- - - -”

Press the ⏻ button to remeasure.

06 Slope Switch


The Slope switch is used to control the opening and closing of the functions of measuring angle , measuring horizontal distance and slope correction .



The angle function, slope function, and horizontal distance function are disabled




The angle function, slope function, and horizontal distance function are enabled

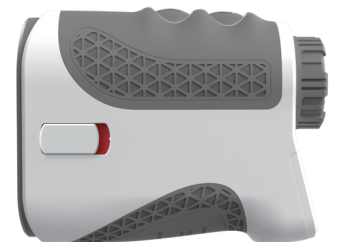

— 4 —

07 Flag Locked+Slope Mode

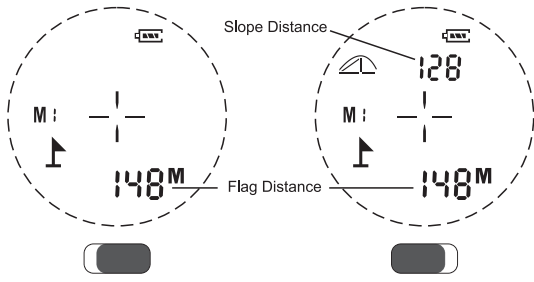

The slope function is disabled

The slope function is enabled

When the slope function is disabled:

Aim at the flag, press the p button, and the rangefinder will vibrate to prompt you: the flagpole distance is displayed at the bottom of the screen.

When the slope function is enabled:


Aim at the flag, press the p button, and the rangefinder will vibrate to prompt you: the flag pole distance is displayed at the bottom of the screen, and the slope correction distance is displayed at the top of the screen.

Note:

This mode supports continuous measurement. After pressing and holding the power button for about 2s, the flagpole will be locked continuously; Every time the flagpole is locked, the fuselage vibrates once, and the measured values on the screen are updated once

GOLF SLOPE CORRECTION USE SCENES

You could get the slope correction distance using AB distance and angle according to golf track formula.

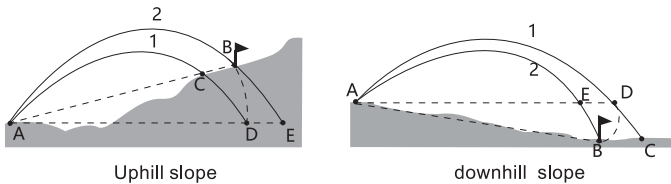

Uphill slope

downhill slope

— 5 —

When uphill, the hitting distance is far

$AB=AD$, if you want hit to B point, you would hit like parabola 2 instead parabola 1;


When uphill: The distance the ball travels should be the distance between AE.

When downhill, the hitting distance is shorter

$AB=AD$, if you want hit to B point, you would hit like parabola 2 instead parabola 1;

When downhill: The distance the ball travels should be the distance between AE.

08 Ranging Mode

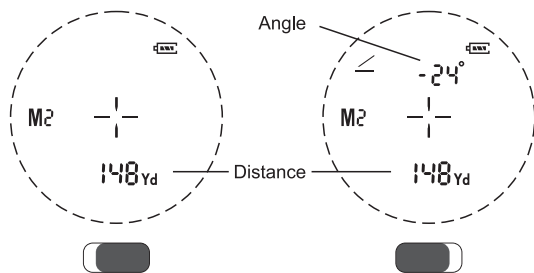

The angle function is disabled

The angle function is enabled

When the angle function is disabled:

Short press the button (P) after targeting, the distance would be displayed on the bottom.

When the angle function is enabled:


Short press the button (P) after targeting, the angle would be displayed on the top of the screen, and the distance would be displayed on the bottom.

Note:

- This mode supports continuous function ;
- The number displayed in front of the tilt angle indicates that the angle value is a depression angle; Angle range $\pm 60^\circ$.

— 6 —

09 Horizontal Distance Mode

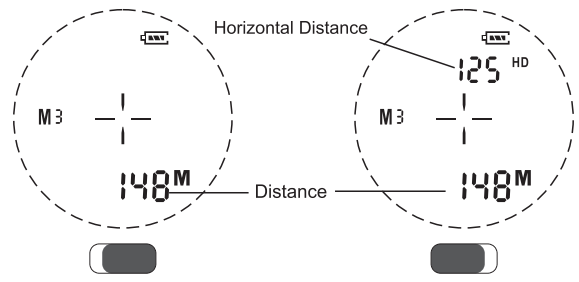

The horizontal distance function is disabled

The horizontal distance function is enabled

When the horizontal distance function is disabled:


Short press the button (P) after targeting, the distance would be displayed on the bottom.

When the horizontal distance function is enabled:

Short press the button (P) after targeting, the horizontal distance would be displayed on the top of the screen, and the distance would be displayed on the bottom.

This mode supports continuous function

GENERAL USAGE SCENARIO DESCRIPTION

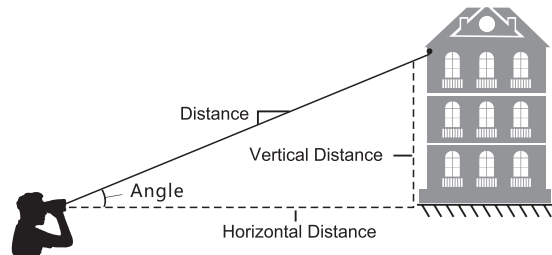

— 7 —

10 Battery

Full Power

Low Power, please replace battery

Battery Service Life:

Operation times: more than 5000 times (25°C).

Replace the battery:

Replace the battery according to the direction of "+" and "-" poles marked on the table.

- Please take out the battery at once if it runs out or doesn't use for a long time.
- Don't keep the battery in extreme temperature environments.
- Waste battery disposal please comply with local laws and regulations.



— 8 —